

PASSIVE INFRARED SENSOR SWITCH CODE 510 LEVEL 3

This circuit is detects infrared radiation from human or animal body with PIR (pyroelectric infrared sensor) and have the fresnel lens (circular and flat) for increase efficiency of detect. Idel for alarm system, automatic light system, etc.

Technical specifications:

- power supply: 12VDC.

- consumption: 65mA.max.

- detection range : 5m.(circular len) or 8m.(flat len)

- delay-off timer: 5 seconds to 5 minutes.

- max. load: 500 watts

- PCB dimensions: 4.90 x 1.85 inches.

How to works:

When have human or animal body to pass PIR sensor, the signal at pin S of PIR is fed to the input of IC1/2 at pin5. IC1/2 is configured as 1st preamplifier with can be adjust the gain control (VR2) ranging from 10 to 100. The output of IC1/2 at pin7 is fed to the input of IC1/1 (2nd preamplifier) at pin2. IC1/3 and IC1/4 are comparator circuit. IC1/3 is compare to ranging the signal swingdown and IC1/4 is compare to ranging the signal swing up.

When the signal over or under swing to setting, the voltage of IC1/3 or IC1/4 is fed to IC2/4 through IC2/1 (buffer), causing TR2 drive to relay and LED ALARM. IC2/2 is configured as a delay-off with can be adjust the delay-off(VR1) timer from 5 seconds to 5 minutes. IC2/3 is delay of operation (30 seconds) when start supply the power supply to circuit. Regulate section is built around TR1, ZD1, C1, C2 and R3 provides a regulated 6 volts for the circuit.


PCB assembly:

Shown in Figure 3 is the assembled PCB. Starting with the lowest height components first, taking care not to short any tracks or touch the edge connector with solder. Some tracks run under components, and care should be taken not to short out these tracks. All components with axial leads should be carefully bent to fit the position on the PCB and then soldered into place. Make sure that the electrolytic capacitors are inserted the correct way around. The LED has a flat spot on the body which lines up with the line on the overlay. Now check that you really did mount them all the right way round!

Testing


Rotate VR at near PIR max. counterclockwise and


rotate VR at near LED max. clockwise. Turn PIR to not human or animal body pass. Connect the power supply 12VDC to "12V" point, LED1 is light-on. Wait 30 seconds while this the circuit is not operate. After wave the hand to pass PIR sensor, relay and LED2 is operate. To pull the hand from face PIR sensor, wait 4 seconds. Relay and LED2 is stop the operate. Rotate VR at near PIR max. clockwise, the operation is a long time. If you want to part between PIR broad and circuit broad, to cut PCB and connect the sheathed cable not more then 1 meter between PIR-board and ciruit-board.

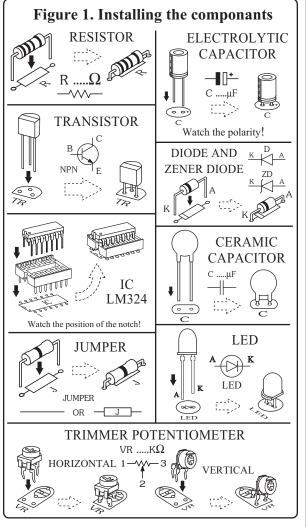


Troubleshooting:

The most problem like the fault soldering. Check all the soldering joint suspicious. If you discover the short track or the short soldering joint, re-solder at that point and check other the soldering joint. Check the position of all component on the PCB. See that there are no components missing or inserted in the wrong places. Make sure that all the polarised components have been soldered the right way round.

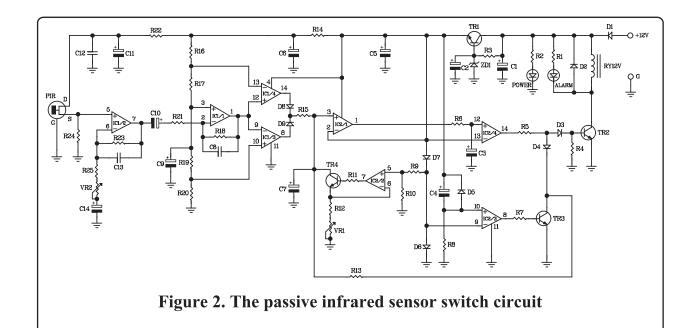

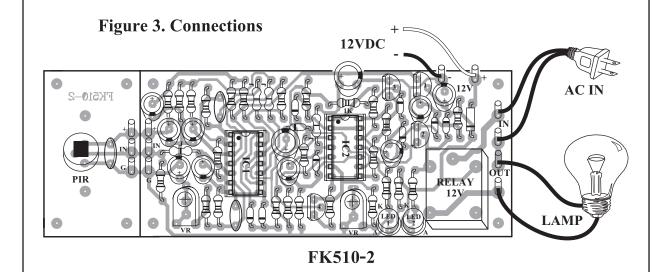

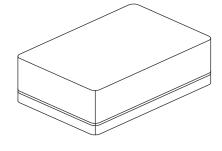

NOTE: FUTURE BOX FB04 is suitable for this kit.

NEW KIT SET ZNEW

CODE FK	DESCRIPTION	POWER
167	FIREFLY LIGHT (NIGHT ACTIVATE)	3VDC.
275	THREE TRAIN SOUNDS (IC DIGITAL)	3VDC.
276	OWL VOICE (IC DIGITAL)	3VDC.
326	DUAL STATION INTERCOM&DOOR BELL	
	(WITH 2 SPEAKER)	6-12VDC.
436	UHF REMOTE CONTROL 1 CH.	TX. 9VDC.
		RX. 12VDC.
673	MINI POWER AMP 1+1W. STEREO	3-12VDC.